

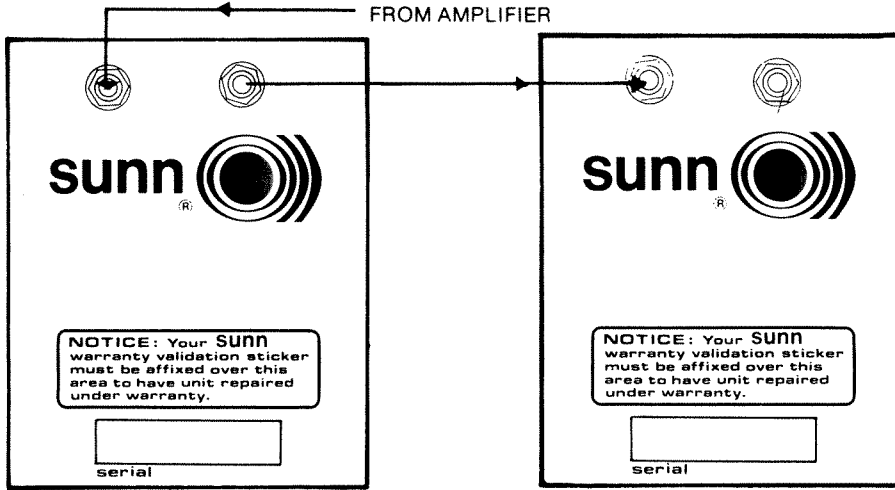


Parallel Patching

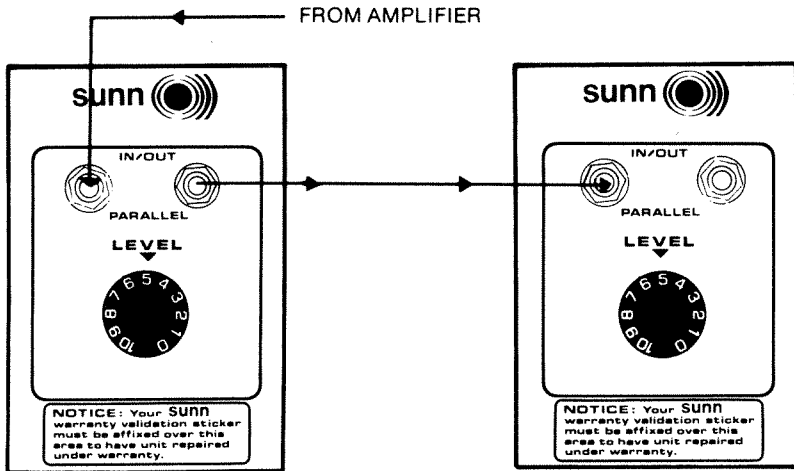

For Sunn enclosures that are provided with parallel input jacks, use either jack for the input, use the other jack to connect another enclosure in parallel. See the chart in the Series and Parallel section of this manual to determine the resulting impedance.

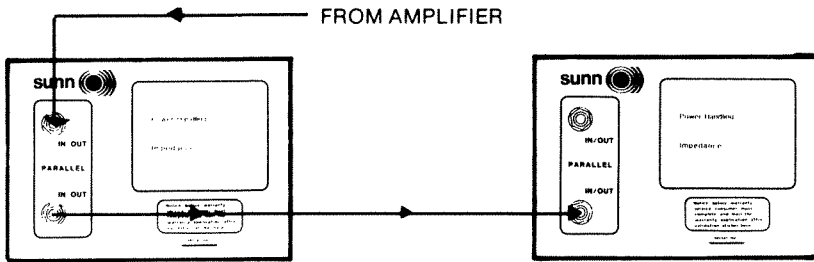

MONITORS. To connect monitors in parallel, use the same patching scheme described above. The level control will adjust the output volume of the cabinet, and will not affect other monitors connected to it.

For monitors with a high frequency level control, only the level of the high frequency driver is affected by this adjustment.

